

ProPrompter HD ProMag Quick Start

Pocket PC Teleprompter Package



Model: PP-401PM

What's included:

- ProPrompter HD mirror box w/ studio quality 60/40 beam splitter glass
- Pocket PC mobile device
- Pocket ProPrompter Software v6.5
- Think Outside Bluetooth mouse
- ProMag fresnel lens magnifier system
- Mobile Device Clip for iPhone/iPod touch/ Pocket PC
- LCD mount for optional LCD operation
- 85mm to 100mm adapter ring
- Duvetyne (black cloth) anti-reflection hood
- Military-grade Storm Case

INSTALLATION:

1. Install the anti-reflection hood with the supplied velcro, if desired. See picture above for reference. Not always required for indoor prompting applications but highly recommended when outdoors to shield the beam splitter glass and mobile device LCD's from sunlight and surface reflections. The cloth hood can then be easily attached or removed as desired.
2. Attach the Mobile Device Clip to the ProPrompter's LCD bracket using the built-in thumbscrew.
3. Mount the ProPrompter hood to your camera by sliding its 85mm diameter opening over the camera's lens and tighten with the supplied oversized thumbscrew. If your camcorder lens is smaller or larger than 85mm outside diameter, optional adapter rings can be purchased through your dealer or online at www.proprompter.com.
4. Insert the included ProMag fresnel lens into the pre-installed lens holder to magnify the Pocket PC's projected screen image by about 50%. See picture below or reference the separate ProMag documentation for more information.

OPERATION:

1. For Pocket PC users - Pocket ProPrompter Software v6.5 for Pocket PC is included with this package. Scripts can be uploaded to your Pocket PC from your computer, an SD card, or wireless connection. See the included Pocket ProPrompter Quick Start and Help Guide for detailed instructions.
2. For iPhone/iPod touch users - Visit www.proprompter.com for information on how to use the ProPrompter ProMag teleprompter with your iPhone or iPod touch.

WARRANTY:

One year parts and labor excluding misuse or accidental damage. A RMA (return merchandise authorization) number will be required before returning any product under warranty or for repair. Please contact Bodelin Technologies at 800-441-6877 or email support@proprompter.com.

SUPPORT: email support@proprompter.com

Bodelin Technologies
6077A SW Lakeview Blvd.
Lake Oswego, OR 97035
800-441-6877
support@proprompter.com
www.proprompter.com

